

# USING GUIDE



# HATOR DARKSIDE

## IMPORTANT TERMS OF USE


- This chair is intended solely for its intended use.
- Do not step on the chair or use it as a ladder as it may tip over.
- When using on a hard floor, be sure to place a mat under the chair to avoid damaging the floor surface.
- Use the product on a horizontal surface.
- This chair is designed for one person use.
- Move the chair carefully.
- Do not place the chair near heat sources to avoid surface damage and fire.
- Avoid direct sunlight on the surface of the chair for a long time.
- It is strictly forbidden to use the chair in places where flammable items are stored or in rooms with high humidity.
- Wipe clean with a soft dry cloth and do not use aggressive detergents.
- It is forbidden to knock out and disassemble the gas lift and other parts.
- Sit with your clothes on. Avoid getting sweat on the upholstery of the chair.
- We recommend wiping the chair after the first assembly with an alcohol-free wipe for hygienic purposes.



**BACKREST ADJUSTMENT**  
Fully pull the lever up and slowly recline the backrest backward to the desired position. When the desired backrest angle is reached, slowly release the lever.




**2D ARMREST ADJUSTMENT**  
Press and hold the button to adjust the needed height. Rotate the armrest around the axis to find a comfortable position.

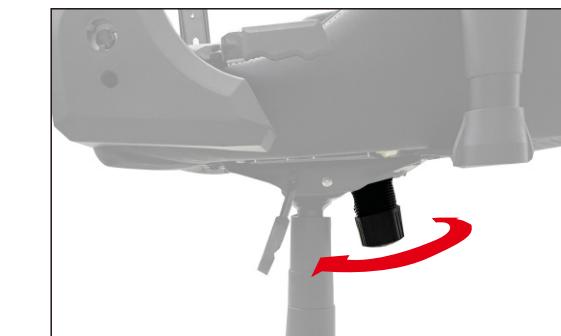


**MULTI-BLOCK ADJUSTMENTS**  
The swing mode can be adjusted according to your weight. If the chair does not swing, turn the handle under the seat clockwise or counterclockwise, adjusting the swing stiffness to suit you. If the swing stiffness is adjusted correctly, you can swing easily in the chair.



**CHANGING THE DISTANCE BETWEEN ARMREST**  
You can change the distance between the armrests. Loosen the M8 screw at the bottom of the armrest and move the armrest to the desired position, then tighten the screw in the selected position.

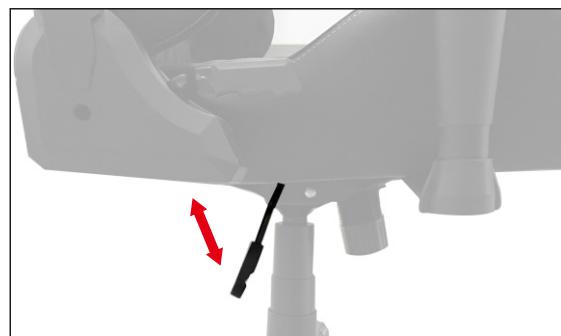

**ADJUSTING THE SEAT HEIGHT AND ROLLING MODE**  
- To lower the seat height, turn the lever knob up.  
- The seat will lower under your weight.  
- To raise the seat height, stand up and turn the lever up.  
- The seat will rise.  
- To turn on the swing, pull the lever to the right.  
The chair will rock when you lean back.  
- To turn off the rocking and lock the seat, move the lever to the left, in the direction of the mechanism.

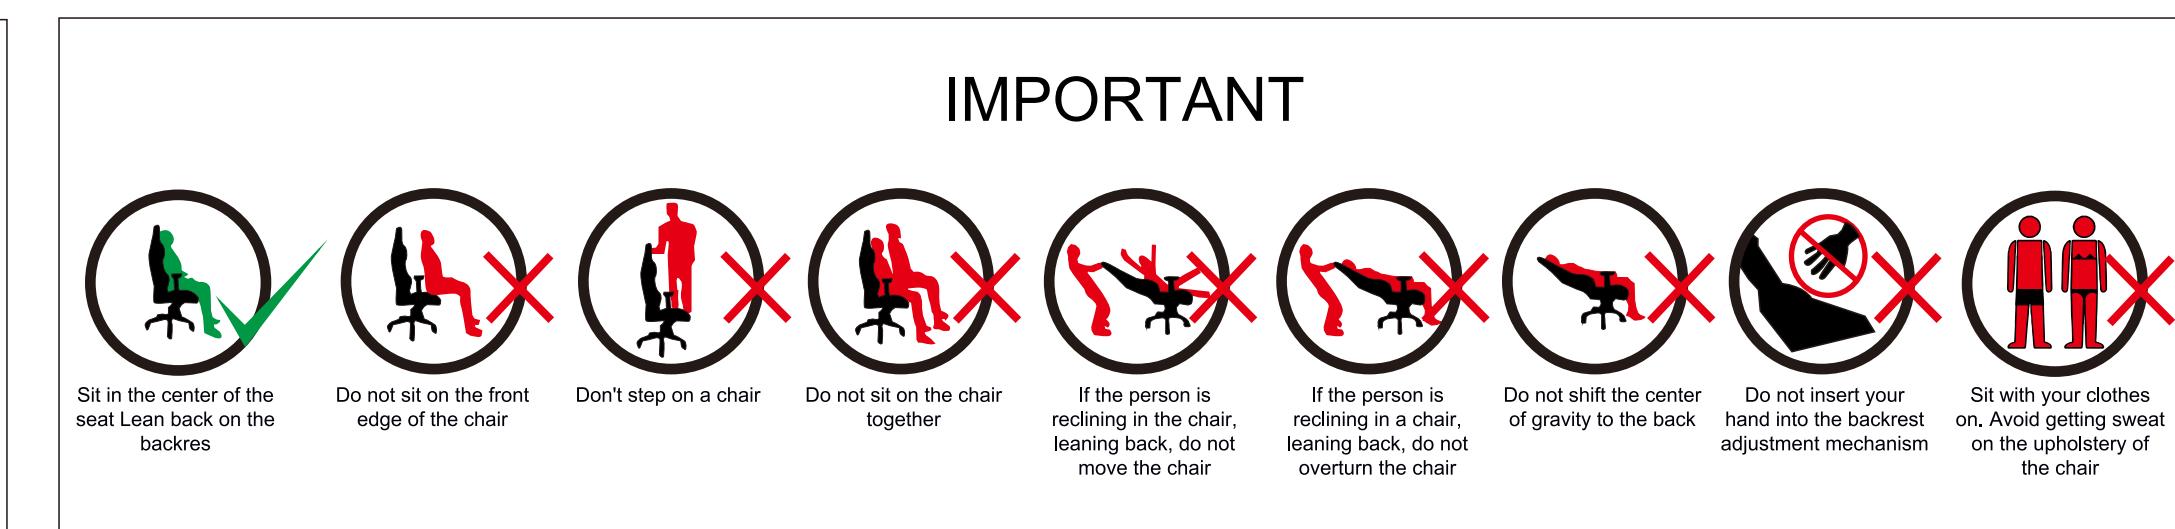

PACKAGE CONTENTS	
BACKREST	x1
SEAT	x1
5-STAR BASE	x1
SIDE COVER KIT	x2
GAS LIFT	x1
WHEELS	x5
SCREW M8x25 mm	x16
LARGE WASHER	x16
SCREWDRIVER	x1
GAS LIFT COVER	x1
GROVER	x16
PLASTIC RING	x4
ARMREST	x2
ADJUSTABLE HEADREST	x1
ADJUSTABLE LUMBAR	
CUSHION	x1
CONVENTIONAL TILT MECHANISM	x1

Do not attempt to adjust this lever until the backrest is installed. It will help you avoid the improper operation of the mechanism and injury of the hand.

## IMPORTANT



**3** Place the assembled base on the floor and insert the gas lift with the button up. Please put on the gas lift cover on it.



**6** Fix the multi-block mechanism underneath the seat base using M8x25 mm screws. There should be soft pads between the mechanism and the seat. Pay attention to the "FRONT" mark on the multi-block mechanism. The front of the mechanism should be facing forward.



**10** Close the mechanism with side covers and fix them with M5x8 mm screws. Do not over-tight the screws to avoid damaging the plastic.



**7** Install the assembled seat on the gas lift. Ensure the gas lift fits securely into the hole in the multi-block mechanism.



**11** Cover the screw holes with decorative caps.




**1** Remove all chair parts from the box without touching the backrest adjuster (the mechanism is on the seat). Before assembling, please check all parts by the checking list.




**2** Take the base and insert the five wheels into the designated holes.



**5** Fix the two armrests to the seat base using M8x25 mm screws.

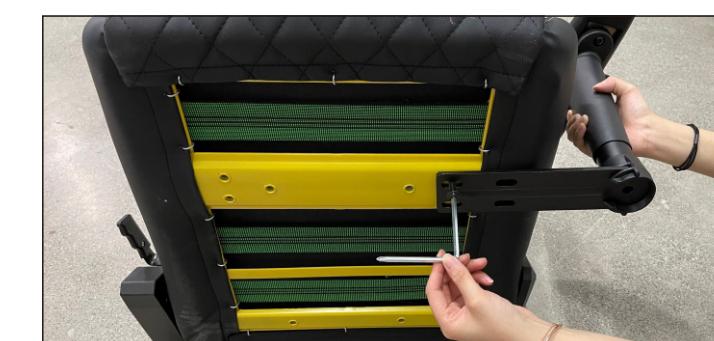

**8** Put the large washer and grover on the screw as it is shown in the picture.

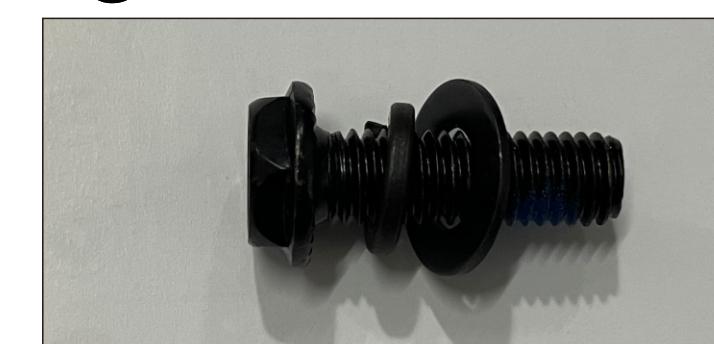

**12** Place the cushions for head and lumbar support by snapping them on the back.



\*Product and parts design are for reference only

# WARRANTY AND CARE

HATOR

## LIMITED WARRANTY TERMS

The manufacturer provides a 1-year limited warranty for all mechanical parts and components of the HATOR gaming chairs for Darkside, SportLight, Flash and 2-years limited warranty for Apex, Hypersport V2, SportEssential, EmotionLight, Arc, Arc Fabric, Arc S, Arc X, Arc X Fabric, Darkside PRO, Darkside PRO Fabric, Darkside RGB and Ironsky chairs, subject to compliance by the user with all warnings and rules for using the products. The service life of the products is 5 years.

The maximum static load capacity for Darkside RGB – up to 90 kg, Darkside, SportLight, SportEssential – up to 100 kg, for Darkside PRO, Darkside PRO Fabric, Flash and Ironsky – up to 120 kg, for Apex, Hypersport V2 chairs – up to 150 kg, for Arc, Arc Fabric, Arc S, Arc X, Arc X Fabric, – up to 200 kg.

Damage to the upholstery of chairs, mechanisms, main assemblies, and components due to non-compliance by the user with the rules for using the products outlined in this manual may limit the manufacturer's warranty obligations.

**IMPORTANT!** The limited warranty does not apply to commercial use of the seat. Commercial use of the seats requires agreement with the supplier.

## HEALTHY LIVING GUIDELINES

To stay healthy, do not sit continuously. From time to time, but at least once every two hours, get up for 10-15 minutes from the chair to walk and stretch. Care about your posture and body position when sitting. Do not hunch over or extremely bend from the vertical in any direction. Your elbows should rest freely on the armrests, and your feet should touch the floor or stand. The angle between the knee and hip should be right or obtuse.

## SAFETY USAGE

This product is a piece of furniture designed for one person in a sitting or lays in a reclined position. To ensure the safety of use is recommended to follow the rules below:

- To avoid damaging the chair and causing or injury, be careful when moving it, please. Pay attention to the position of your hands when adjusting the movable elements and levers.
- Fully pull the backrest adjustment lever to upper position before changing the backrest tilt and release it only after the desired angle is set.
- To prevent the chair from tipping over: 1) find the center of your gravity when back rests on the lumbar support. 2) Do not sit on the front edge of the seat. 3) Do not stand on the chair. 4) Do not press on the backrest when the seat is reclined. 5) Do not put all your weight on the back.
- To prevent damage and drying of PU leather, cracking of plastic components, do not put the chair near the radiator, fireplace, or other high-temperature sources and keep the chair out of direct sunlight.
- To avoid damage, do not place heavy objects on the chair's armrests, do not lean on them with all your weight, and do not exceed the maximum permitted load on the chair, including putting more than one person on it.
- To prevent damage to the upholstery, keep the chair away from sharp objects, avoid rubbing against walls or furniture, and keep pets away.

The chairs are created for usage in standard temperature conditions.

## CARE AND CLEANING

There are minimal requirements for keeping up the chair. In case of loosening of individual parts of the chair, please tighten the loosened bolts. If there are extraneous squeaks, find the squeaky part and add some viscous grease to the joint.

Sweat, dirt, grease, and other impurities negatively affect the appearance and durability of PU leather. Please, keep your chair away from it.

To remove pollutions off the chair, clean the chair surface with a slightly damp cloth and suitable cleaning agents. Do not use bleached or aggressive cleaning agents.

We recommended cleaning the surface of the chair from time to time but at least once a month.

# HATOR DARKSIDE

DARKSIDE  
Gaming Chair.  
Manual in English:  
читать  
на русском:

## НАЛАШТУВАННЯ ТА ВИКОРИСТАННЯ

**ВАЖЛИВІ УМОВИ ВИКОРИСТАННЯ**

- Дане крісло призначено виключно для використання за назначениям.
- Не ставайте на крісло і не використовуйте його як сходи, оскільки воно може перекинутися.
- При використанні на твердій підлозі обов'язково підкладайте спеціальний килимок під крісло, щоб не пошкодити поверхню підлоги.
- Використовуйте цей виріб на горизонтальній поверхні.
- Це крісло призначено для використання однією людиною.
- Пересувайте крісло обережно.
- Використовуйте м'яку суху тканину та не використовуйте агресивні миючі засоби.
- Забороняється вибивати та розбирати газліфт та інші запчастини.
- Протирайте м'якою сухою тканиною та не використовуйте агресивні муючі засоби.
- Сидіть в одязі. Уникайте потрапляння поту на обивку крісла.
- Рекомендуємо протерти крісло, після першої збірки, безспиртовою серветкою в гігієнічних цілях.



\*Зображення продукції та деталей представлені для ознайомлення



### РЕГУЛЮВАННЯ НАХИЛУ СПИНКИ

Потягніть за важіль вгору та повільно відхиліть спинку назад до бажаного положення. Коли потрібний кут нахилу спинки досягнуто, повільно поверніть важіль у вихідне положення. Переконайтесь, що важіль повністю опущений.



### РЕГУЛЮВАННЯ 2D ПІДЛОКІТНИКІВ

Натисніть та утримуйте кнопку, щоб відрегулювати потрібну висоту. Поверніть підлокітник навколо вісі, щоб обрати комфортне положення.




### РЕГУЛЮВАННЯ РЕЖИМУ ГОЙДАННЯ

Режим гойдання можна відрегулювати відповідно до своєї ваги. Якщо крісло не гойдається, поверніть ручку під спинкою за горизонтальною осі, відрегулювавши жорсткість хитання під себе. Якщо жорсткість хитання правильно відрегульована, ви можете легко гойдатись в кріслі.



### РЕГУЛЮВАННЯ ВІДСТАНІ ПІДЛОКІТНИКІВ

Відстань між підлокітниками можна регулювати. Послабте гвинт M8 у нижній частині підлокітника та перемістіть підлокітник у бажане положення, а потім затягніть гвинтом у вибраному положенні.

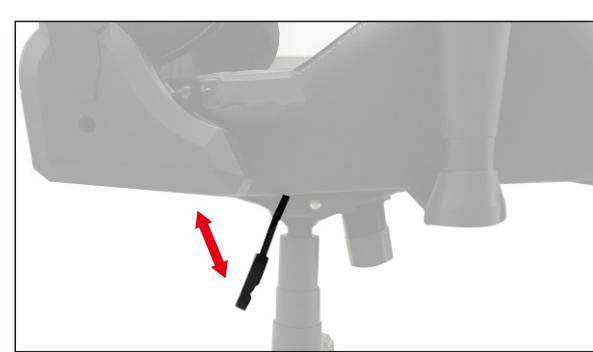

### РЕГУЛЮВАННЯ ВИСОТІ СІДІННЯ ТА РЕЖИМУ ГОЙДАННЯ

- Щоб зменшити висоту сидіння, поверніть ручку важеля вгору. Сидіння опуститься під важіль ваги.  
- Щоб збільшити висоту сидіння, відгиньте важіль вгору. Сидіння підійде.  
- Щоб увімкнути гойдання - потягніть важіль в праву сторону. Крісло буде гойдатися, якщо відкинеться назад.  
- Щоб вимкнути гойдання і зафіксувати сидіння, посуньте важіль в ліву сторону, в напрямку механізму.

У КОМПЛЕКТИ	
СПИНКА	x1
СІДІННЯ	x1
ХРЕСТОВИНА	x1
КОМПЛЕКТ БІЧНИХ	
НАКЛАДОК	x2
ГАЗЛІФТ	x1
РОЛИКИ	x5
ГВИНТ M8x25мм	x16
ВЕЛИКА ШАЙБА	x16
ШЕСТИГРАННИЙ КЛЮЧ	x1
НАКЛАДКА НА ГАЗЛІФТ	x1
МАЛА ШАЙБА	x16
ПЛАСТИКОВЕ КІЛЬЦЕ	x4
ПІДЛОКІТНИКИ	x2
ПОДУШКА ПІД ГОЛОВУ	x1
ПОДУШКА ПІД СПИНУ	x1
МЕХАНІЗМ ГОЙДАННЯ	x1

Не намагайтесь регулювати важіль, доки не встановлено спинку. Це допоможе уникнути некоректної роботи механізму та можливих травм рук.

## ВАЖЛИВО



3 Розмістіть зібрану хрестовину на підлозі та вставте газліфт кнопкою вгору. Зверху одягніть накладку на газліфт.



6 Закріпіть механізм гойдання у відповідних отворах сидіння, використовуючи гвинти M8x25мм. Між механізмом та сидінням мають бути м'які прокладки. Зверніть увагу на позначку "FRONT" (передня сторона) на механізмі. Передня сторона механізму має бути спрямована вперед.



10 Закрійте механізм бічними накладками та закріпіть їх за допомогою гвинтів M5х8мм. Уникайте надмірних зусиль при затягуванні гвинтів, щоб не пошкодити пластик.



11 Закрійте отвори гвинтів декоративними заглушками.



12 Закріпіть подушки під голову та спину, зафіксувавши їх на спинці.



## ВАЖЛИВО!



# ГАРАНТІЯ ТА ДОГЛЯД

**HATOR**

## УМОВИ ОБМЕЖЕНОЇ ГАРАНТІЇ

Виробник надає обмежену гарантію на всі механічні вузли та компоненти ігрових крісел HATOR на період в 1 рік для крісел Darkside, SportLight, Flash та 2 роки для крісел Arrex, Hypersport V2, SportEssential, EmotionLight, Arc, Arc Fabric, Arc S, Arc X, Arc X Fabric, Darkside PRO, Darkside PRO Fabric, Darkside RGB, та Ironsky за умови дотримання користувачем усіх застережень та правил експлуатації виробів. Термін служби виробів складає 5 років.

Максимальне допустиме статичне навантаження для крісел Darkside RGB – до 90кг, Darkside, SportLight та SportEssential – до 100 кг, Darkside PRO, Darkside PRO Fabric, Flash та Ironsky – до 120 кг, Arrex та Hypersport V2 – до 150 кг, для крісел Arc, Arc Fabric, Arc S, Arc X, Arc X Fabric, – до 200 кг.

Ушкодження обшивки крісел, механізмів, основних вузлів та компонентів внаслідок недотримання користувачем правил експлуатації виробів, викладених у цьому посібнику, може спричинити обмеження гарантійних зобов'язань з боку виробника.

**ВАЖЛИВО!** Умови обмеженої гарантії не поширюються на комерційне використання крісел. Питання комерційного використання крісел узгоджуються із постачальником.

## РЕКОМЕНДАЦІЇ З ЗДОРОВОГО ОБРАЗУ ЖИТТЯ

З метою збереження здоров'я, не сидіть безперервно. Періодично, але не рідше одного разу на дві години, піднімайтесь на 10-15 хвилин з крісла, щоб походити та розім'ятаєтися. Слідкуйте за поставою та положенням тіла під час сидіння. Не варто горбітися, надмірно відхилятися від вертикаль в будь-який бік. Лікті повинні вільно лежати на підлокітниках, а ноги торкатися підлоги, або підставки. Кут між коліном та стегном має бути прямим або розгорнутим.

## ПРАВИЛА ТЕХНІКИ БЕЗПЕКИ

Даний продукт є предметом меблів, розрахованім на одну людину, що займає сидяче або напівсидяче положення. Для забезпечення безпеки використання рекомендується дотримуватися наведених нижче правил:

- Щоб уникнути пошкодження крісла та отримання травм, будьте обережні під час його переміщення. Слідкуйте за положенням рук під час регулювання рухомих елементів та важелів.
- Повністю натискайте важіль регулювання спинки, перш ніж змінювати нахил спинки і відпускайте його лише після того, як встановлено бажаний кут нахилу.
- Щоб запобігти перекиданню крісла, утримуйте центр ваги на сидінні, спершишь спиною на поперекову опору. Не сидіть на передньому краї сидіння, не ставайте на нього, не тисніть на спинку, коли крісло відкинуте назад та не спирайтесь всією своєю вагою на спинку.
- Щоб не допустити вигоряння та усихання обивки, розтріскування пластикових компонентів, не піддавайте крісло впливу сильного тепла, наприклад, від радіатора або каміна, оберігайте крісло від прямих променів сонячного світла.
- Щоб уникнути поломки, не розміщуйте на підлокітниках крісла важкі предмети, не спирайтесь на них всією своєю вагою, не перевищуйте максимальне допустиме навантаження на крісло, у тому числі саджаючи в нього більше однієї людини.
- Щоб запобігти пошкодженню обивки, тримайте крісло далеко від гострих предметів, не допускайте тертя об стіни або предмети меблів, бережіть його від домашніх тварин.

Крісла розраховані на експлуатацію у стандартних температурних умовах.

## ДОГЛЯД І ОЧИЩЕННЯ

Для збереження крісла у робочому стані потрібне мінімальне технічне обслуговування. У разі розхитування окремих частин крісла профілактично підтягніть ослаблені болти. За наявності сторонніх скрипів, визначте яка сама деталь скрипить і додайте в з'єднання трохи в'язкого мастила.

Піт, бруд, жир та інші забруднення негативно впливають на зовнішній вигляд та термін служби екошкіри. Будь ласка, не допускайте їх попадання на обивку крісла.

У разі потрапляння забруднень, очистіть поверхню крісла за допомогою злегка вологі ганчірки та відповідних засобів для чищення. Не використовувати відбілювальні та агресивні засоби для чищення.

Рекомендується періодично, але не рідше одного разу на місяць, очищати поверхню крісла.